

Key to Fig 13:2 1 Righthand front flasher 2 Righthand headlamp 3 Righthand iodine lamp 4 Town horn 5 Road horn 6 Lefthand iodine lamp 7 Lefthand headlamp 8 Lefthand front flasher 9 Regulator 10 Righthand front brake unit 11 Starter relay 12 Battery 13 Starter 14 Generator 15 Lefthand front brake unit 16 Front heater blower 17 Wiper motor 18 Accessories terminal 19 Righthand fuse box 20 'Sanor' relay for headlamp flasher 21 'Sanor' relay of the righthand front iodine lamp 22 'Sanor' relay for lefthand front iodine lamp 23 Temperature sender 24 Distributor 25 Brake pressure switch 26 Stop switch 27 Ignition coil 28 Lefthand fuse box 29 Righthand front door switch 30 Lefthand front door switch 31 Front heater switch 32 Ignition switch 33 Cigar lighter 34 Starter relay switch 35 Windscreen wiper switch 36 Battery charge pilot light 37 Parking light switch 38 Electric clock 39 Interior light switch 40 Iodine lamp switch 41 Lighting and horn switch 42 Temperature gauge 43 Headlamp pilot light 44 Dashboard lamps 45 Brake pressure switch pilot light 46 Front brake pad wear warning light 47 Petrol gauge 48 Flasher indicating lamp 49 Flasher switch and headlamp flasher switch 50 Dashboard and clock light rheostat 51 Petrol gauge sender unit 52 Righthand front interior light 53 Lefthand front interior light 54 Boot light 55 Boot light switch 56 Righthand rear flasher 57 Righthand stoplight and number plate light 58 Lefthand stoplight and number plate light 59 Lefthand rear flasher 60 Rear heater (-15°C) switch (optional) 61 Rear heater booster (optional) 62 Switch for 63 (optional) 63 Fresh air fan (optional) 64 'Sanor' relay for horn compressor (optional) 65 Horn compressor (optional)

